


Note: Prior to tightening the lower cover, make sure that the oil pipe (17) is inserted in the bore (arrow) free of tension.

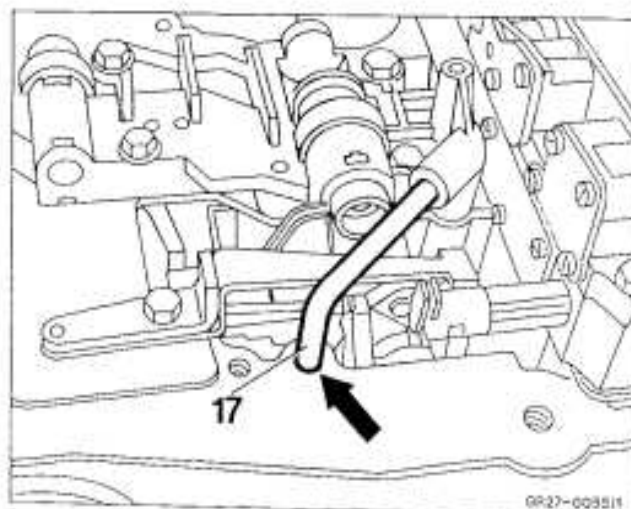

Disassembly and assembly of automatic transmission 27.51

118 Mount support (11) with leaf spring (10) and tighten hexagon bolt (13).

