


DAMPING FORCE AND SPRING SETTING

Before installing front fork to the steering stem, be sure to check the spring adjuster setting position and damping force adjuster.

Standard Setting	Damping force	Spring
	"2" 2nd position	"1" softest

INNER TUBE

Install the front fork assembly with aligning upper surface ① of the inner tube with the upper surface ② of the steering stem upper bracket.

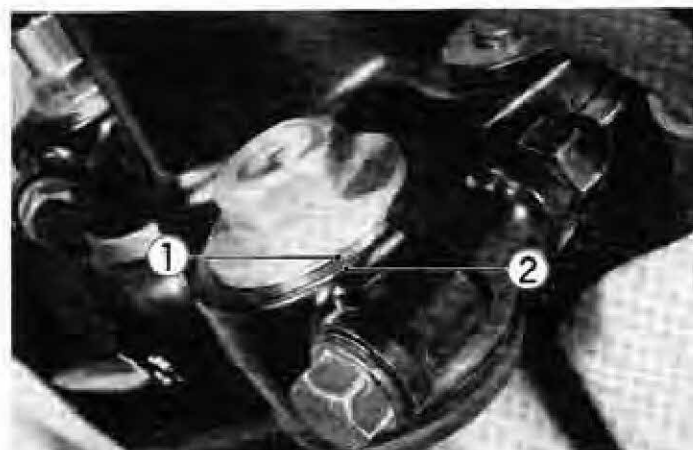

FORK AIR


Lift up the front wheel by a jack till it becomes free from any burden, and loosen the air lock screw ③

Set the air pressure gauge to the valve ④ and turn the valve handle ⑤ clockwise. Set the hand pump to the valve ⑥, turn the valve handle ⑦ clockwise, and charge the air.

Let the air out by loosening the handle ⑦ till the specified air pressure is left inside, and tighten the air lock screw ③



STD Air pressure	0.5 kg/cm ² (7.11 psi)
------------------	-----------------------------------

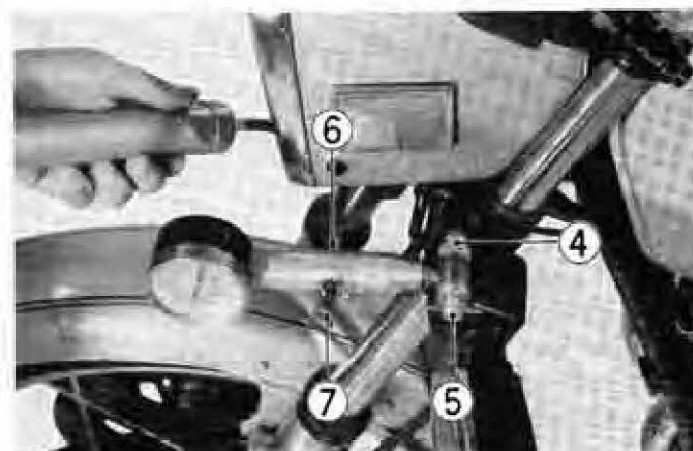

CAUTION:

Do not charge air more than 2.5 kg/cm² (36 psi.)

Set the each spring load adjusting cam and damping force adjuster at the same position for both right and left forks.