


Datum: _____

Kennzeichen: _____

Kilometerstand: _____

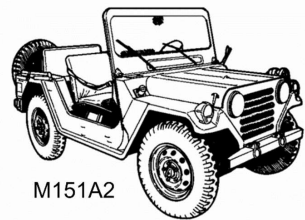


An appropriate localized view (LV) letter key is provided after the lubrication entry. Localized views begin on card 6.

INTERVAL • LUBRICANT

OE/ HDO	Crankcase Fill (See note 2) (LV-A) (C)
OE/ HDO	Crankcase Level (Check level) (See note 2) (LV-C) (C)
OE/ HDO	Engine Oil Filter (See note 3) (LV-B) (O)
PL-S	Distributor (See note 5) (LV-J) (O)
OE/ HDO	Crankcase Drain (Drain and refill) (See note 2) (LV-U) (O)
C/MR	GO Transmission Drain (Drain and refill) (See note 7) (LV-M) (O)
C/MR	GO Transfer Case Drain (Drain and refill) (See note 7) (LV-N) (O)
S	GAA Rear Propeller Shaft Universal Joints (1 fitting each end) (See note 8) (LV-D) (O)
S	GAA Rear Wheel Drive Shafts and Universal Joints (3 fittings each shaft) (See note 8) (LV-F) (O)
A	GAA Rear Wheel Bearings (See note 9) (O)

OE/ HDO	Crankcase Fill (See note 2) (LV-A) (C)
OE/ HDO	Crankcase Level (Check level) (See note 2) (LV-C) (C)
OE/ HDO	Engine Oil Filter (See note 3) (LV-B) (O)
PL-S	Distributor (See note 5) (LV-J) (O)
OE/ HDO	Crankcase Drain (Drain and refill) (See note 2) (LV-U) (O)
GO	Transmission Drain (Drain and refill) (See note 7) (LV-M) (O)
GO	Transfer Case Drain (Drain and refill) (See note 7) (LV-N) (O)
GAA	Rear Propeller Shaft Universal Joints (1 fitting each end) (See note 8) (LV-D) (O)
GAA	Rear Wheel Drive Shafts and Universal Joints (3 fittings each shaft) (See note 8) (LV-F) (O)
GAA	Rear Wheel Bearings (See note 9) (O)


INTERVAL • LUBRICANT

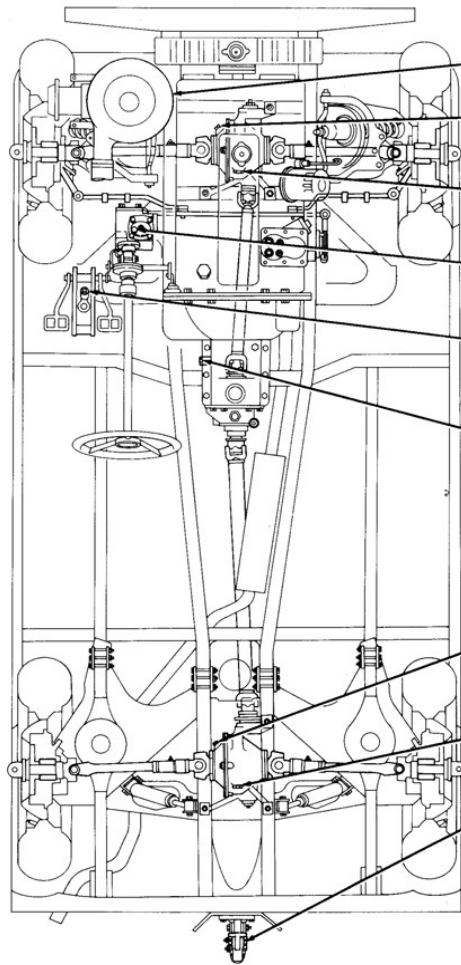


- M** **OE/** Air Cleaner
 HDO (See note 4) (LV-H) (O)
- M** **GO** Front Differential
 Fill and Level (Check level)
 (See note 7) (LV-G) (O)
- C/MR** **GO** Front Differential Drain
 (Drain and refill)
 (See note 7) (LV-E) (O)
- M** **GO** Steering Gear
 Fill and Level
 (Check level) (LV-P) (O)
- M** **BFS** Brake Master Cylinder
 Fill and Level
 (Check level)
 (See note 6) (LV-T) (O)
- M** **GO** Transmission Fill and Level
 (Check level)
 (See note 7) (LV-L) (O)

- M** **GO** Rear Differential
 Fill and Level
 (Check level)
 (See note 7) (LV-G) (O)
- C/MR** **GO** Rear Differential Drain
 (Drain and refill)
 (See note 7) (LV-E) (O)
- S** **GAA** Pintle
 (2 fittings)
 (See note 13) (LV-K) (O)

INTERVAL • LUBRICANT

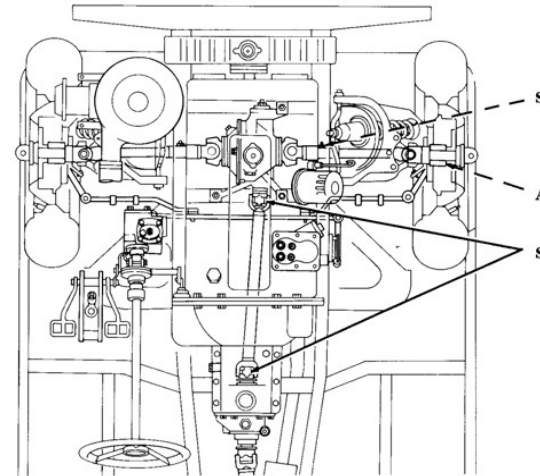

- GAA** Front Wheel Drive Shafts
 and Universal Joints
 (3 fittings each shaft)
 (See note 8) (LV-F) (O)
- A** **GAA** Front Wheel Bearings
 (See note 9) (O)
- S** **GAA** Front Propeller Shaft
 Universal Joints
 (1 fitting each end)
 (See note 8) (LV-D) (O)

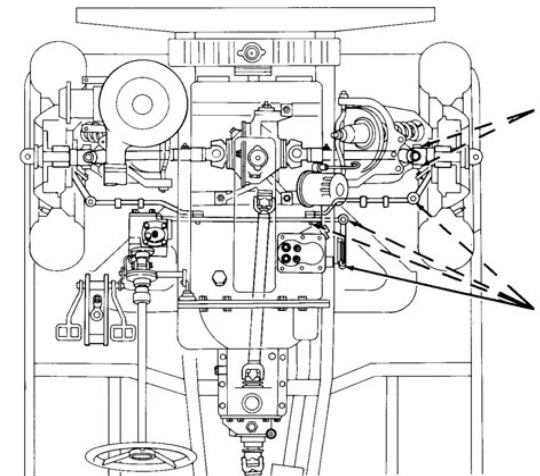

- S** **GAA** Upper and Lower
 Suspension Ball Joints
 (2 fittings)
 (See note 13) (LV-Q) (O)
- S** **GAA** Steering Linkage
 (See note 13) (LV-S)
 (6 fittings) (LV-R)
 (1 fitting)
 (O)