 
 
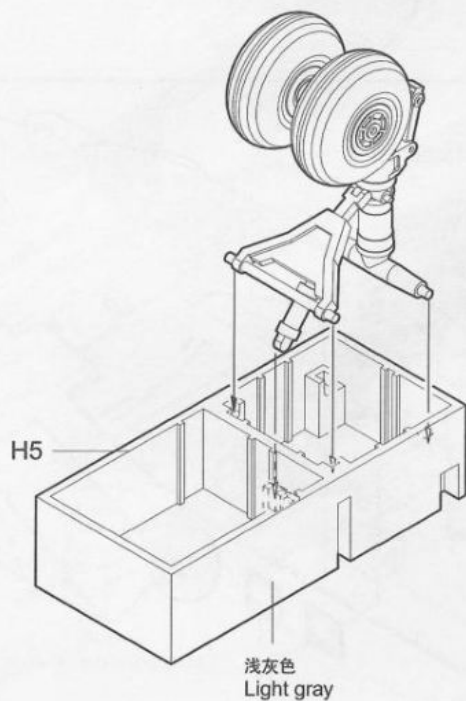 
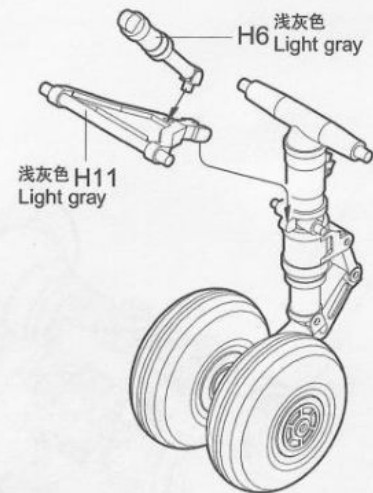 
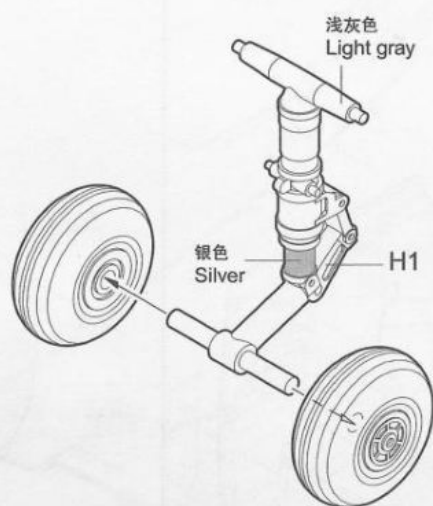 



19 前起落架的组装
Nose undercarriage assembly

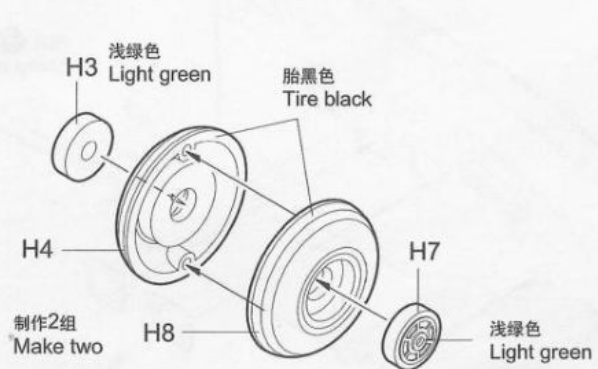


20 机炮的组装
Four-barrelled rotating gun assembly

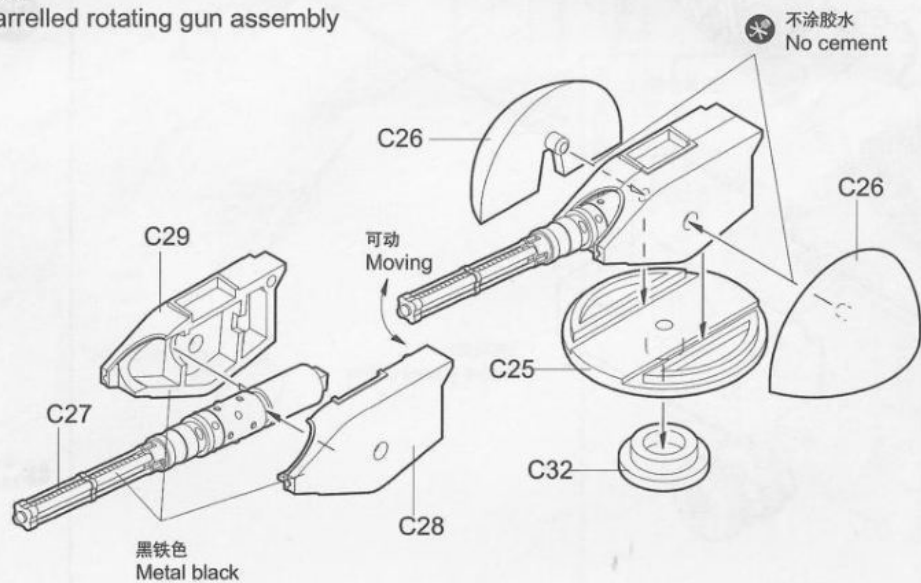

 
21 前轮舱的安装
Nose wheel cabin installation

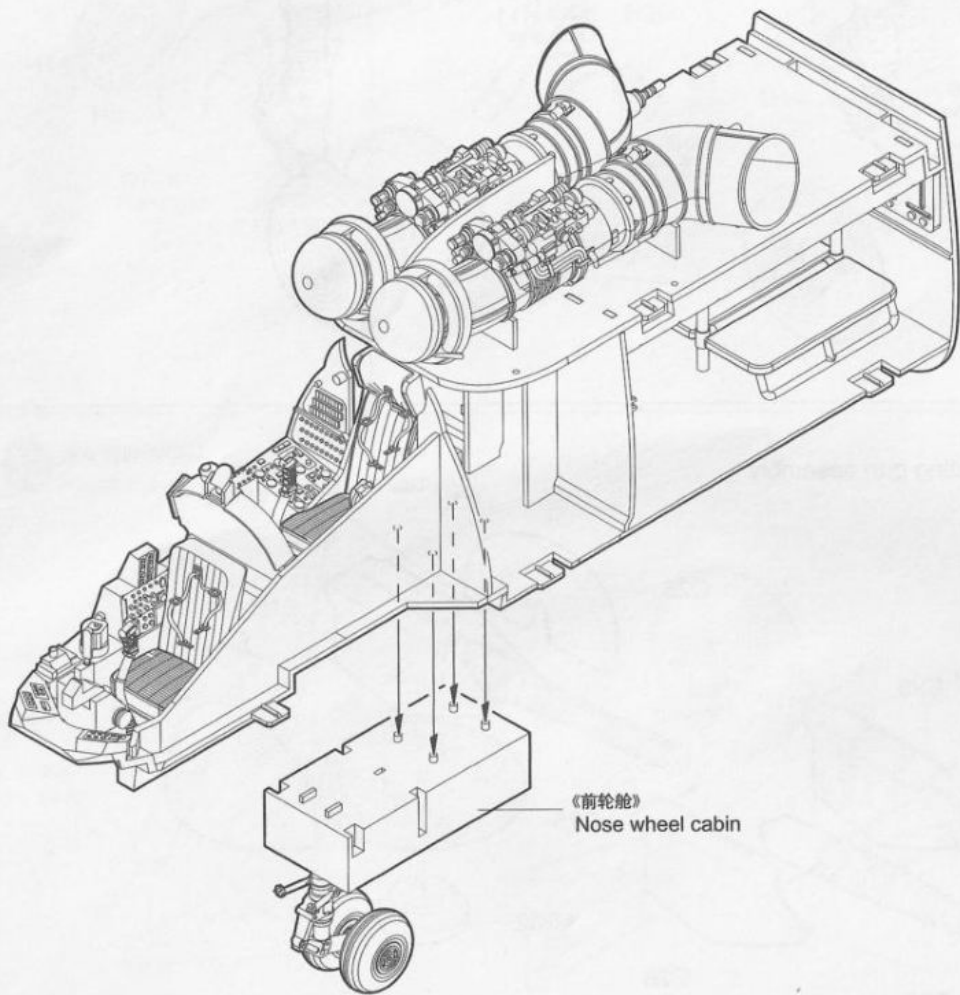

 
22 左侧主起落架的安装
Left main undercarriage installation

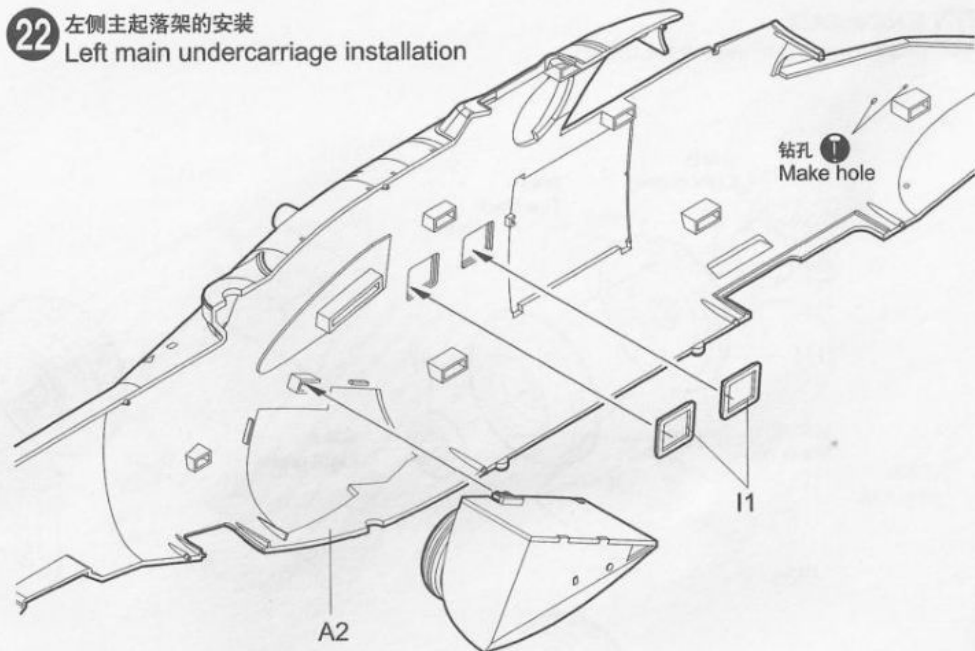

 
23 右侧主起落架的安装
Right main undercarriage installation

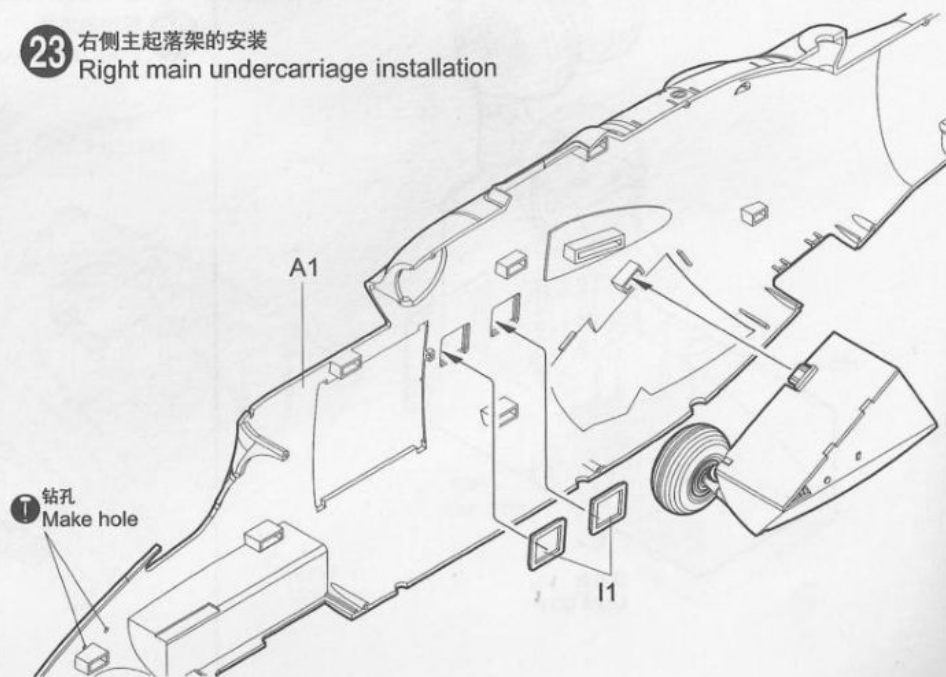


24 发动机的安装
Engine installation

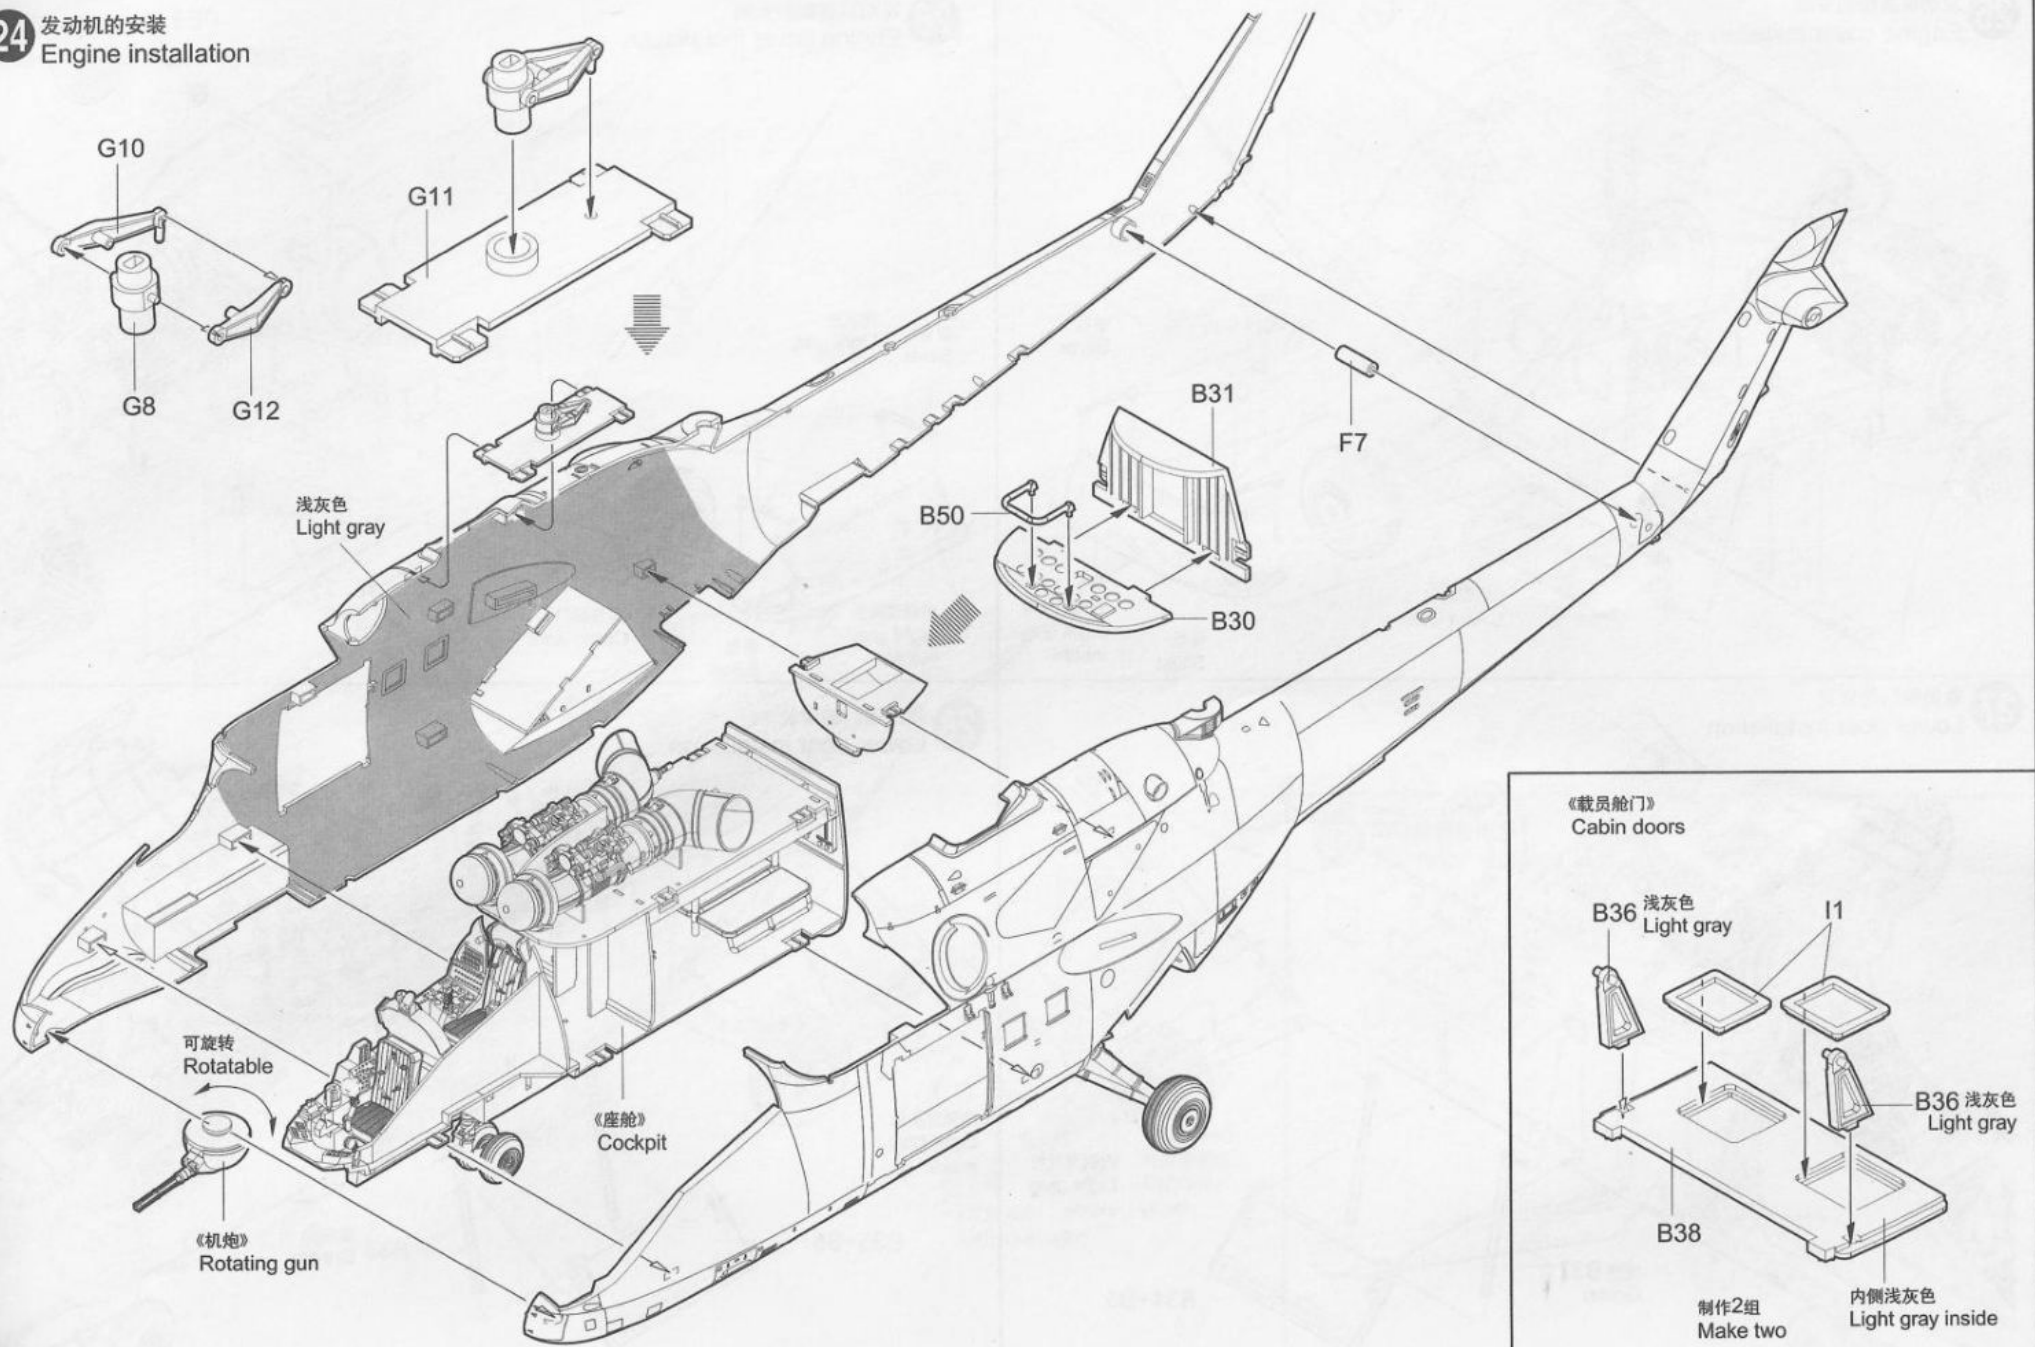 


25 发动机盖板的安装
Engine cover installation

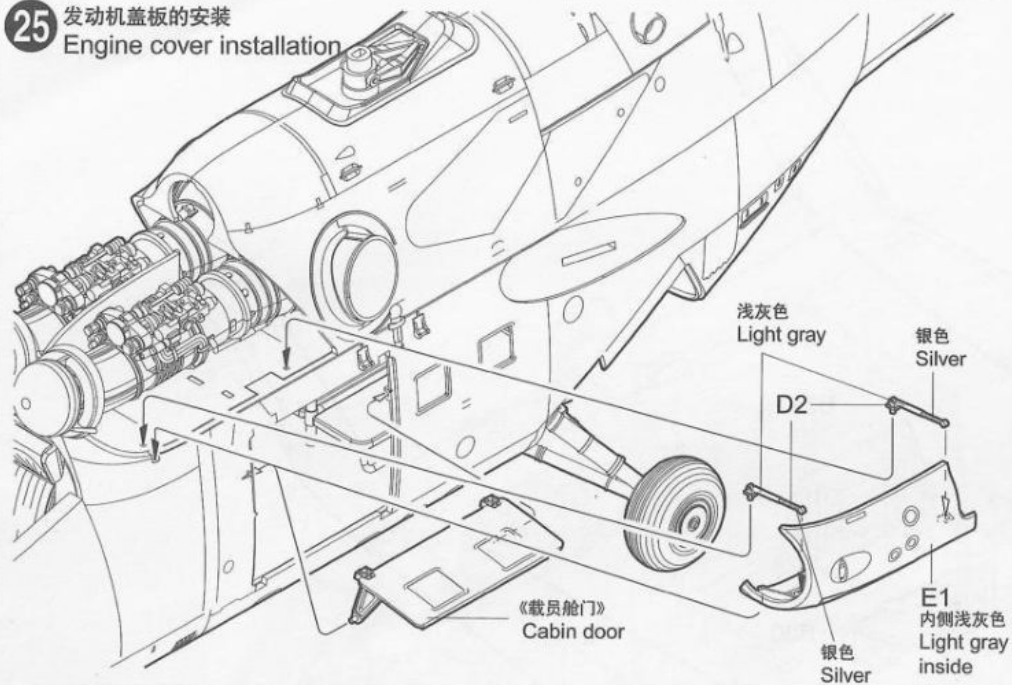 


26 发动机盖板的安装
Engine cover installation

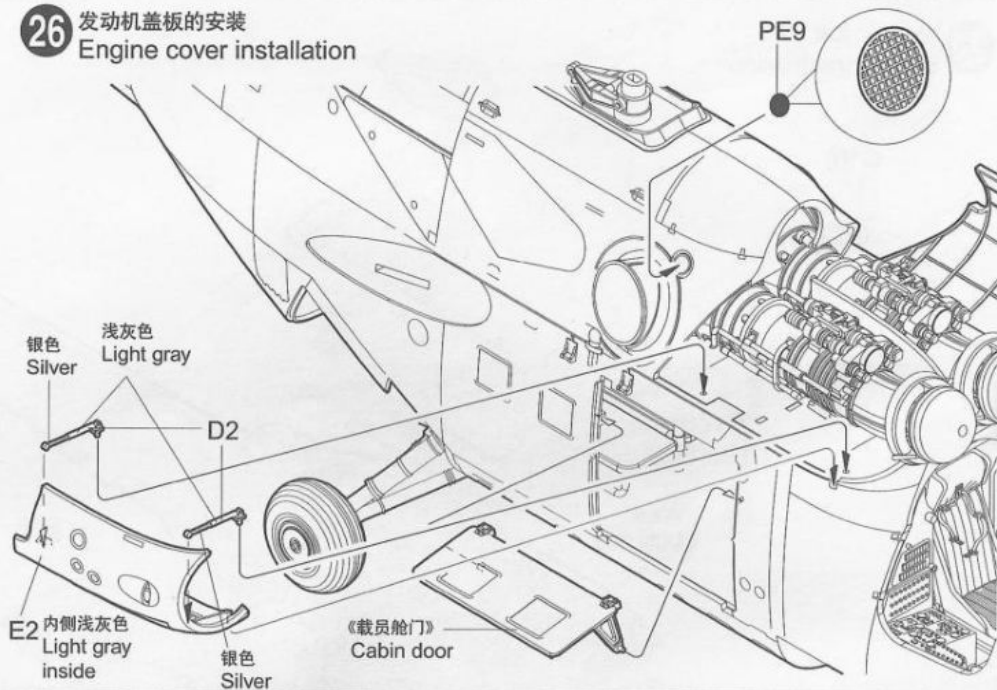 


27 载员舱门的安装
Lower door installation

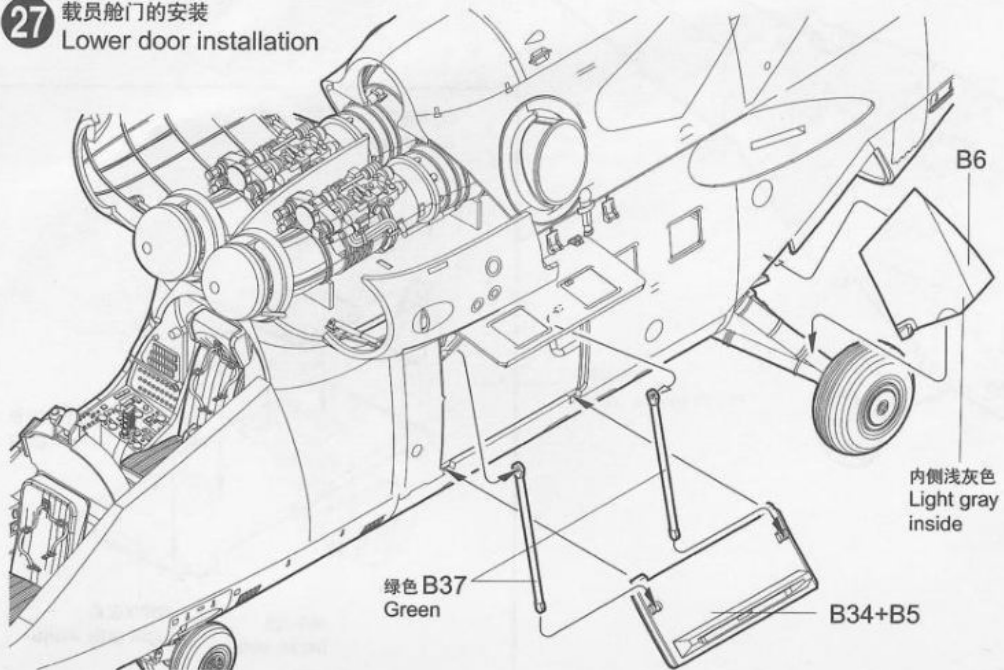 


28 载员舱门的安装
Lower door installation

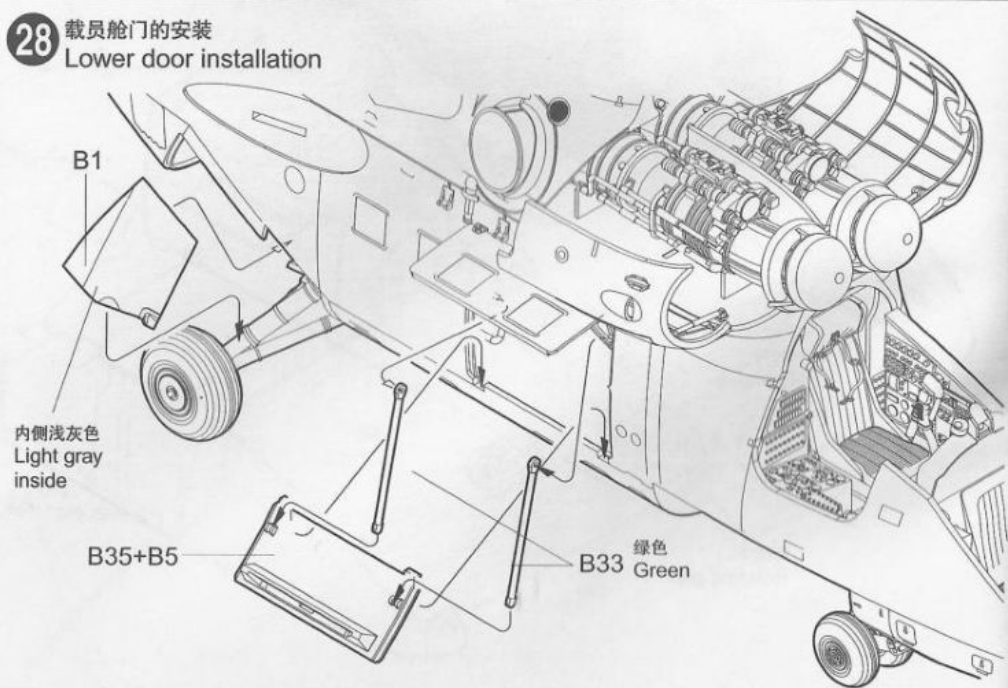 


29 短翼
Stub wings installation

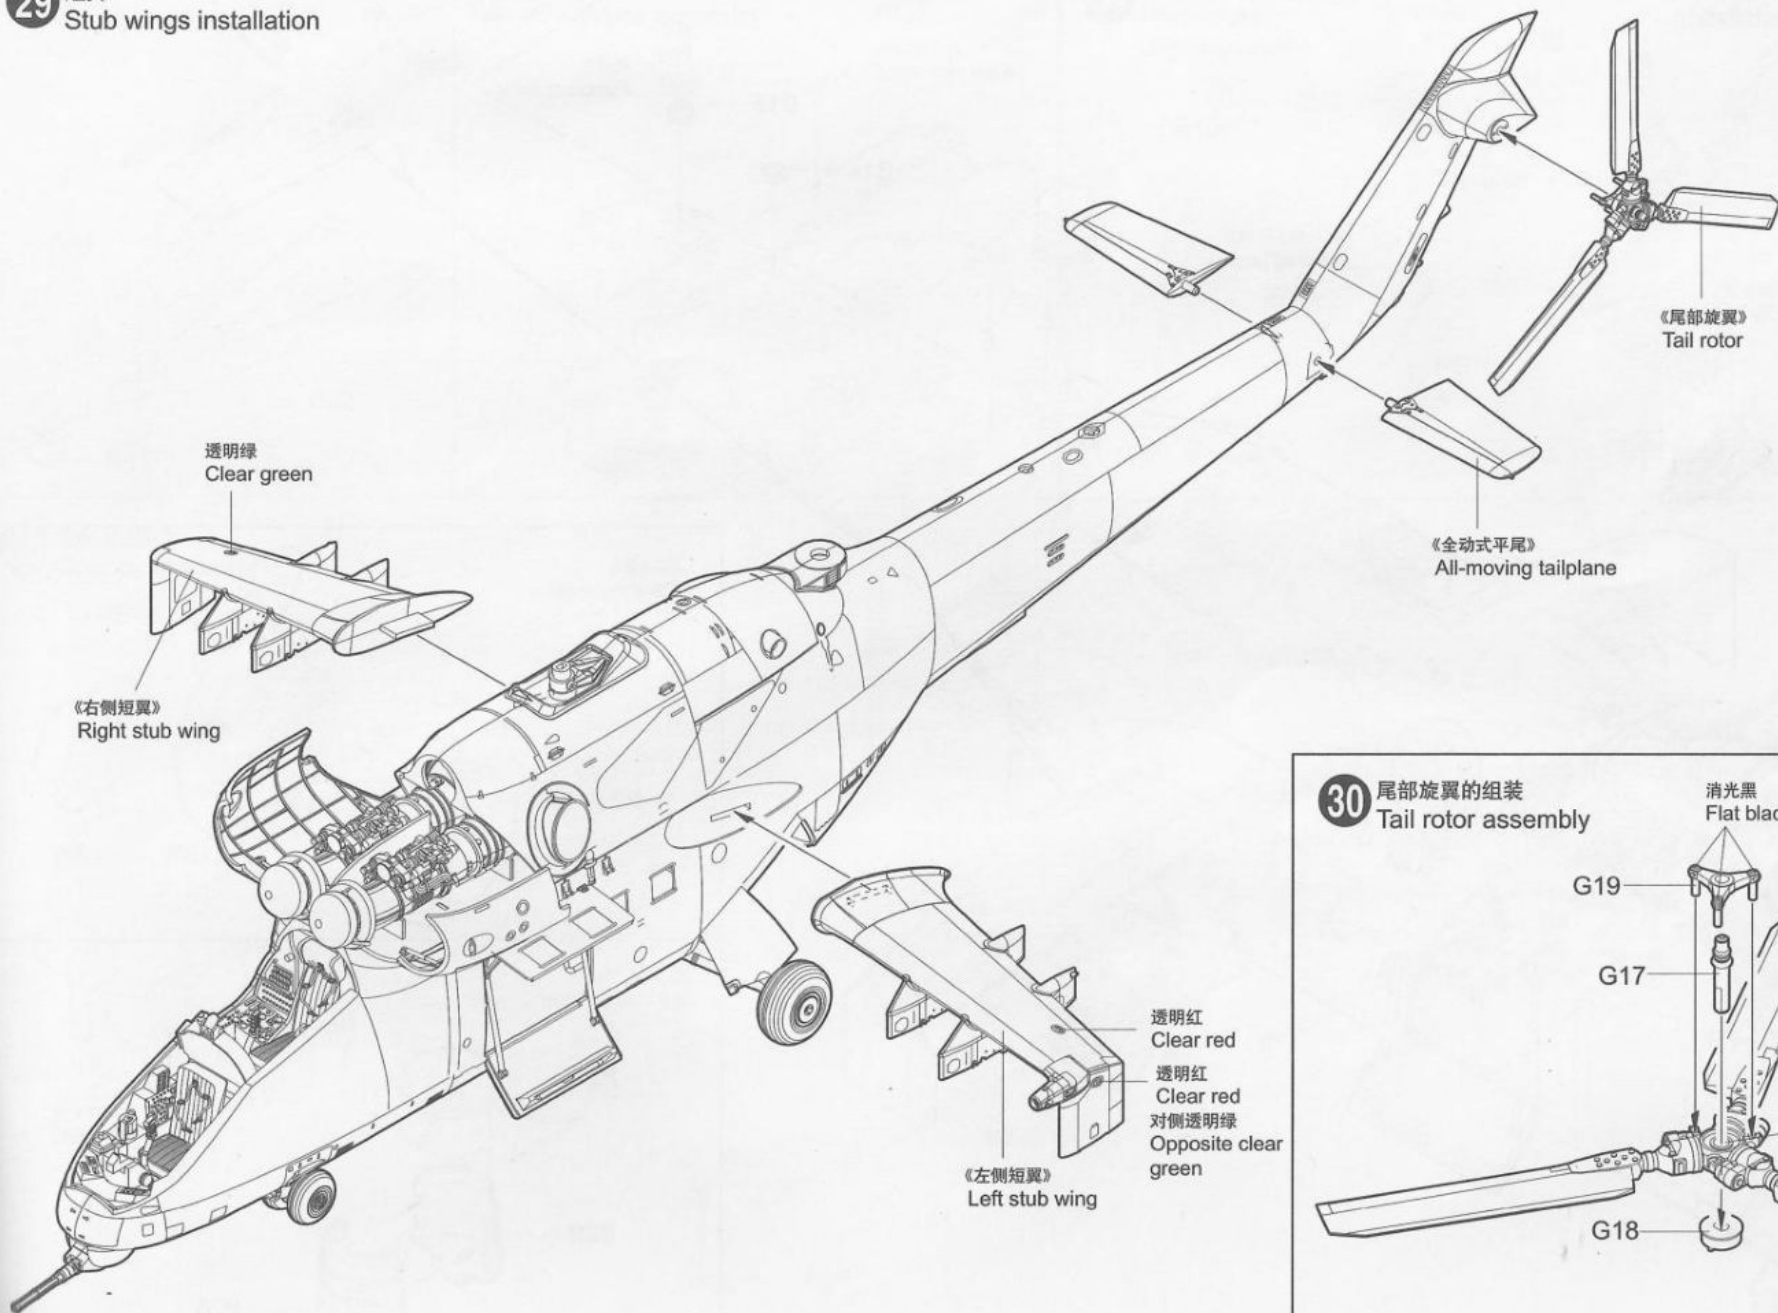 


30 尾部旋翼的组装
Tail rotor assembly

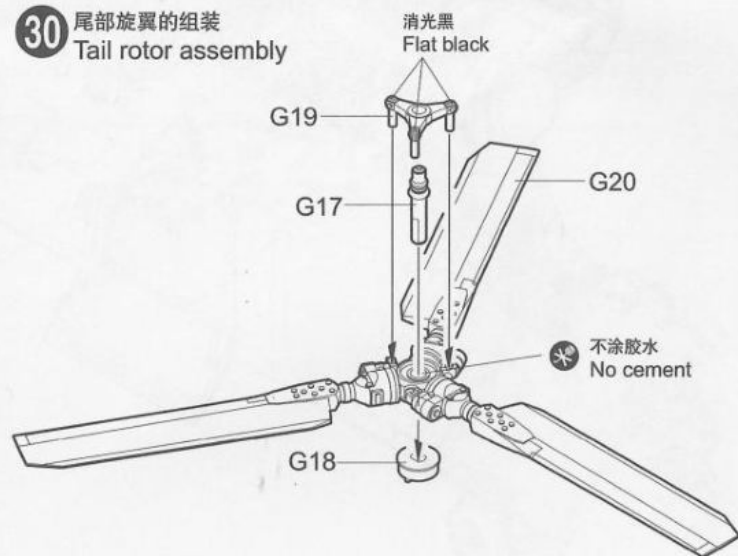 

 
31 红外线干扰器的安装
Infrared jammer installation

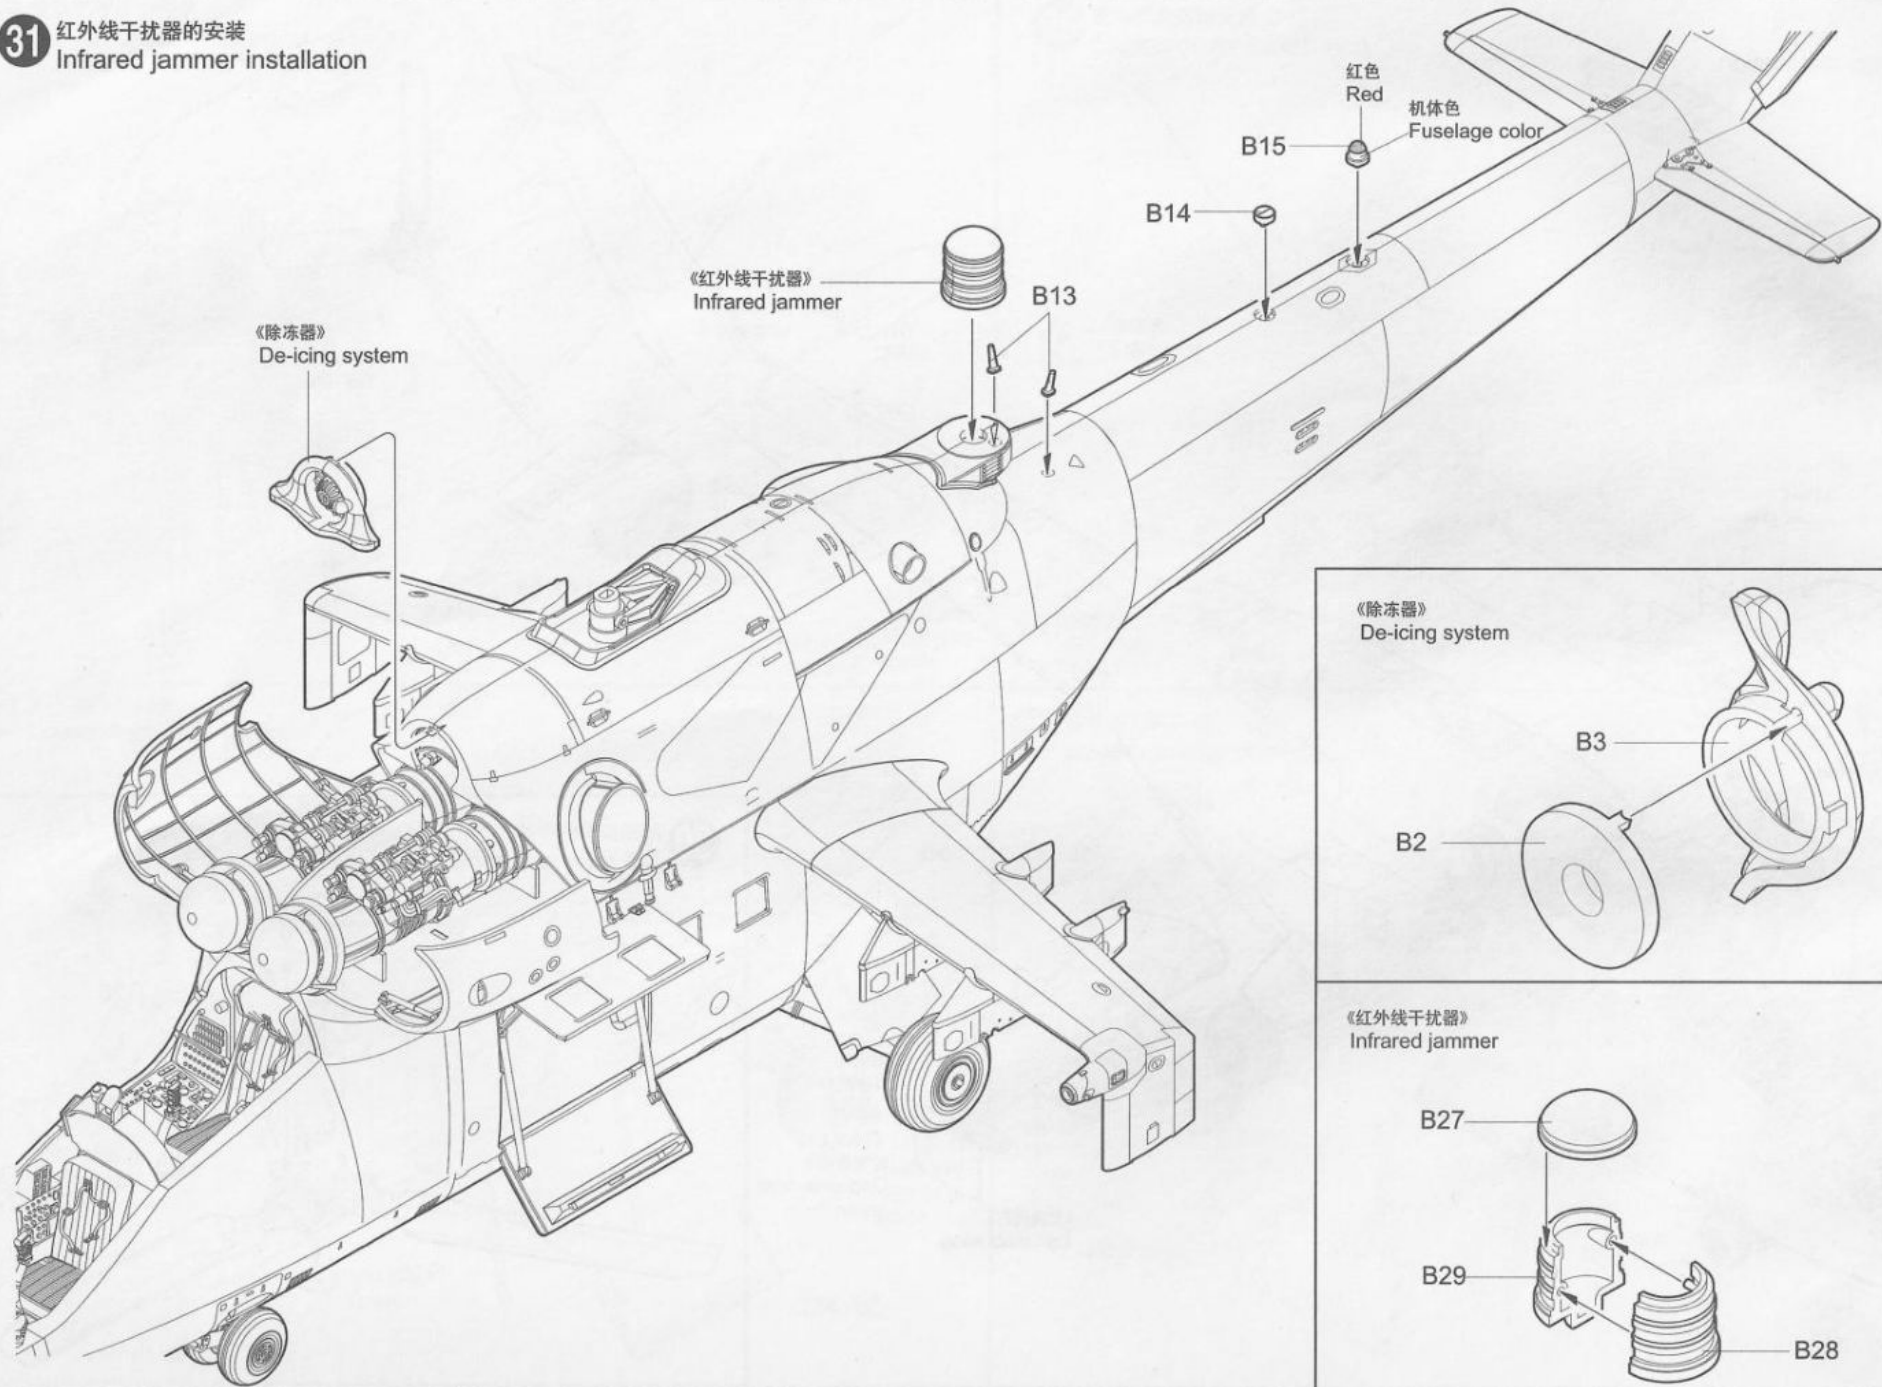


《除冻器》
De-icing system

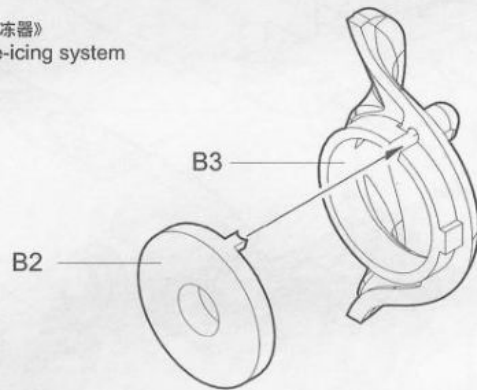 


《红外线干扰器》
Infrared jammer

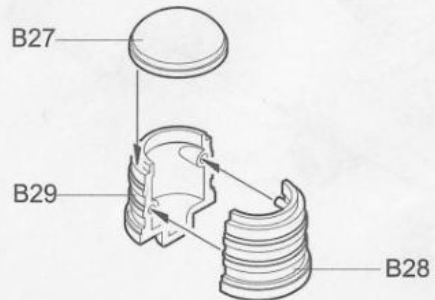 


32 尾撬的组装
Tail bumper assembly

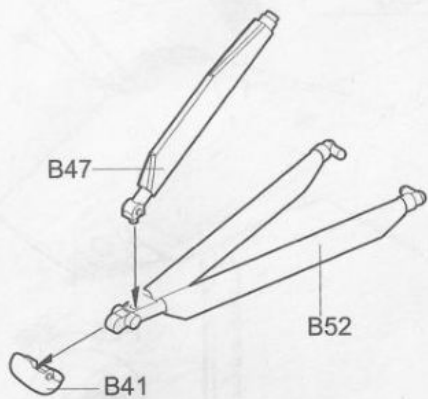 


33 弹药舱的组装
Ammo box assembly

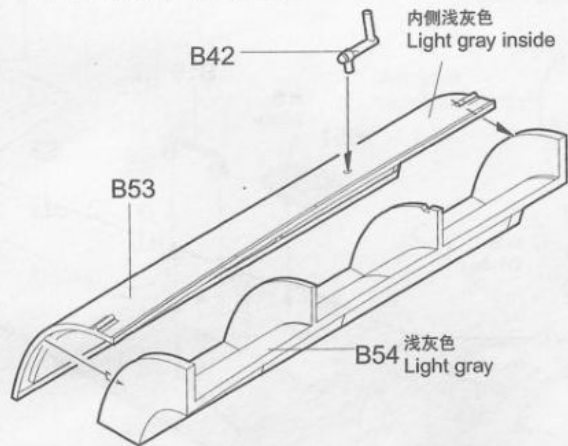 


34 驾驶舱的组装
Pilot cockpit door assembly

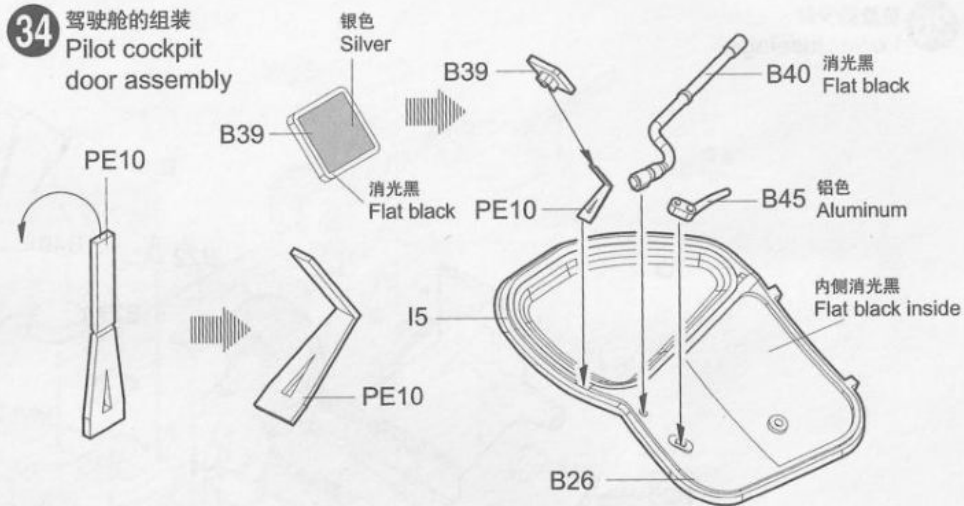 


35 座舱盖的组装
Canopy assembly

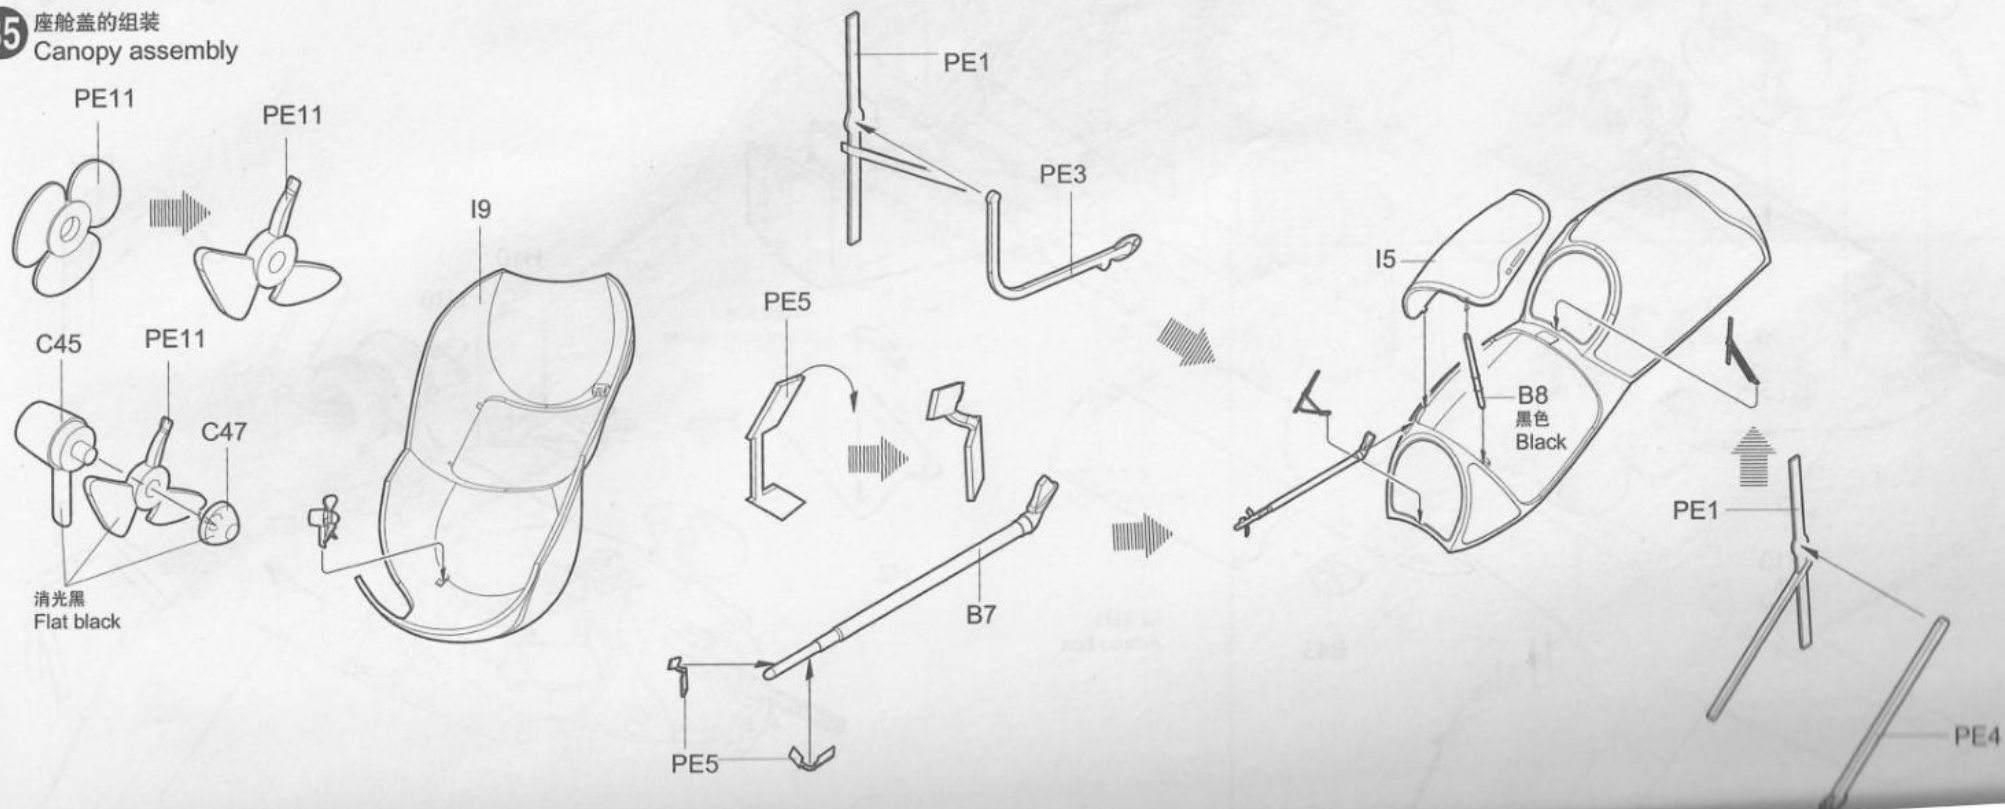 



36 机腹的安装
Lower fuselage

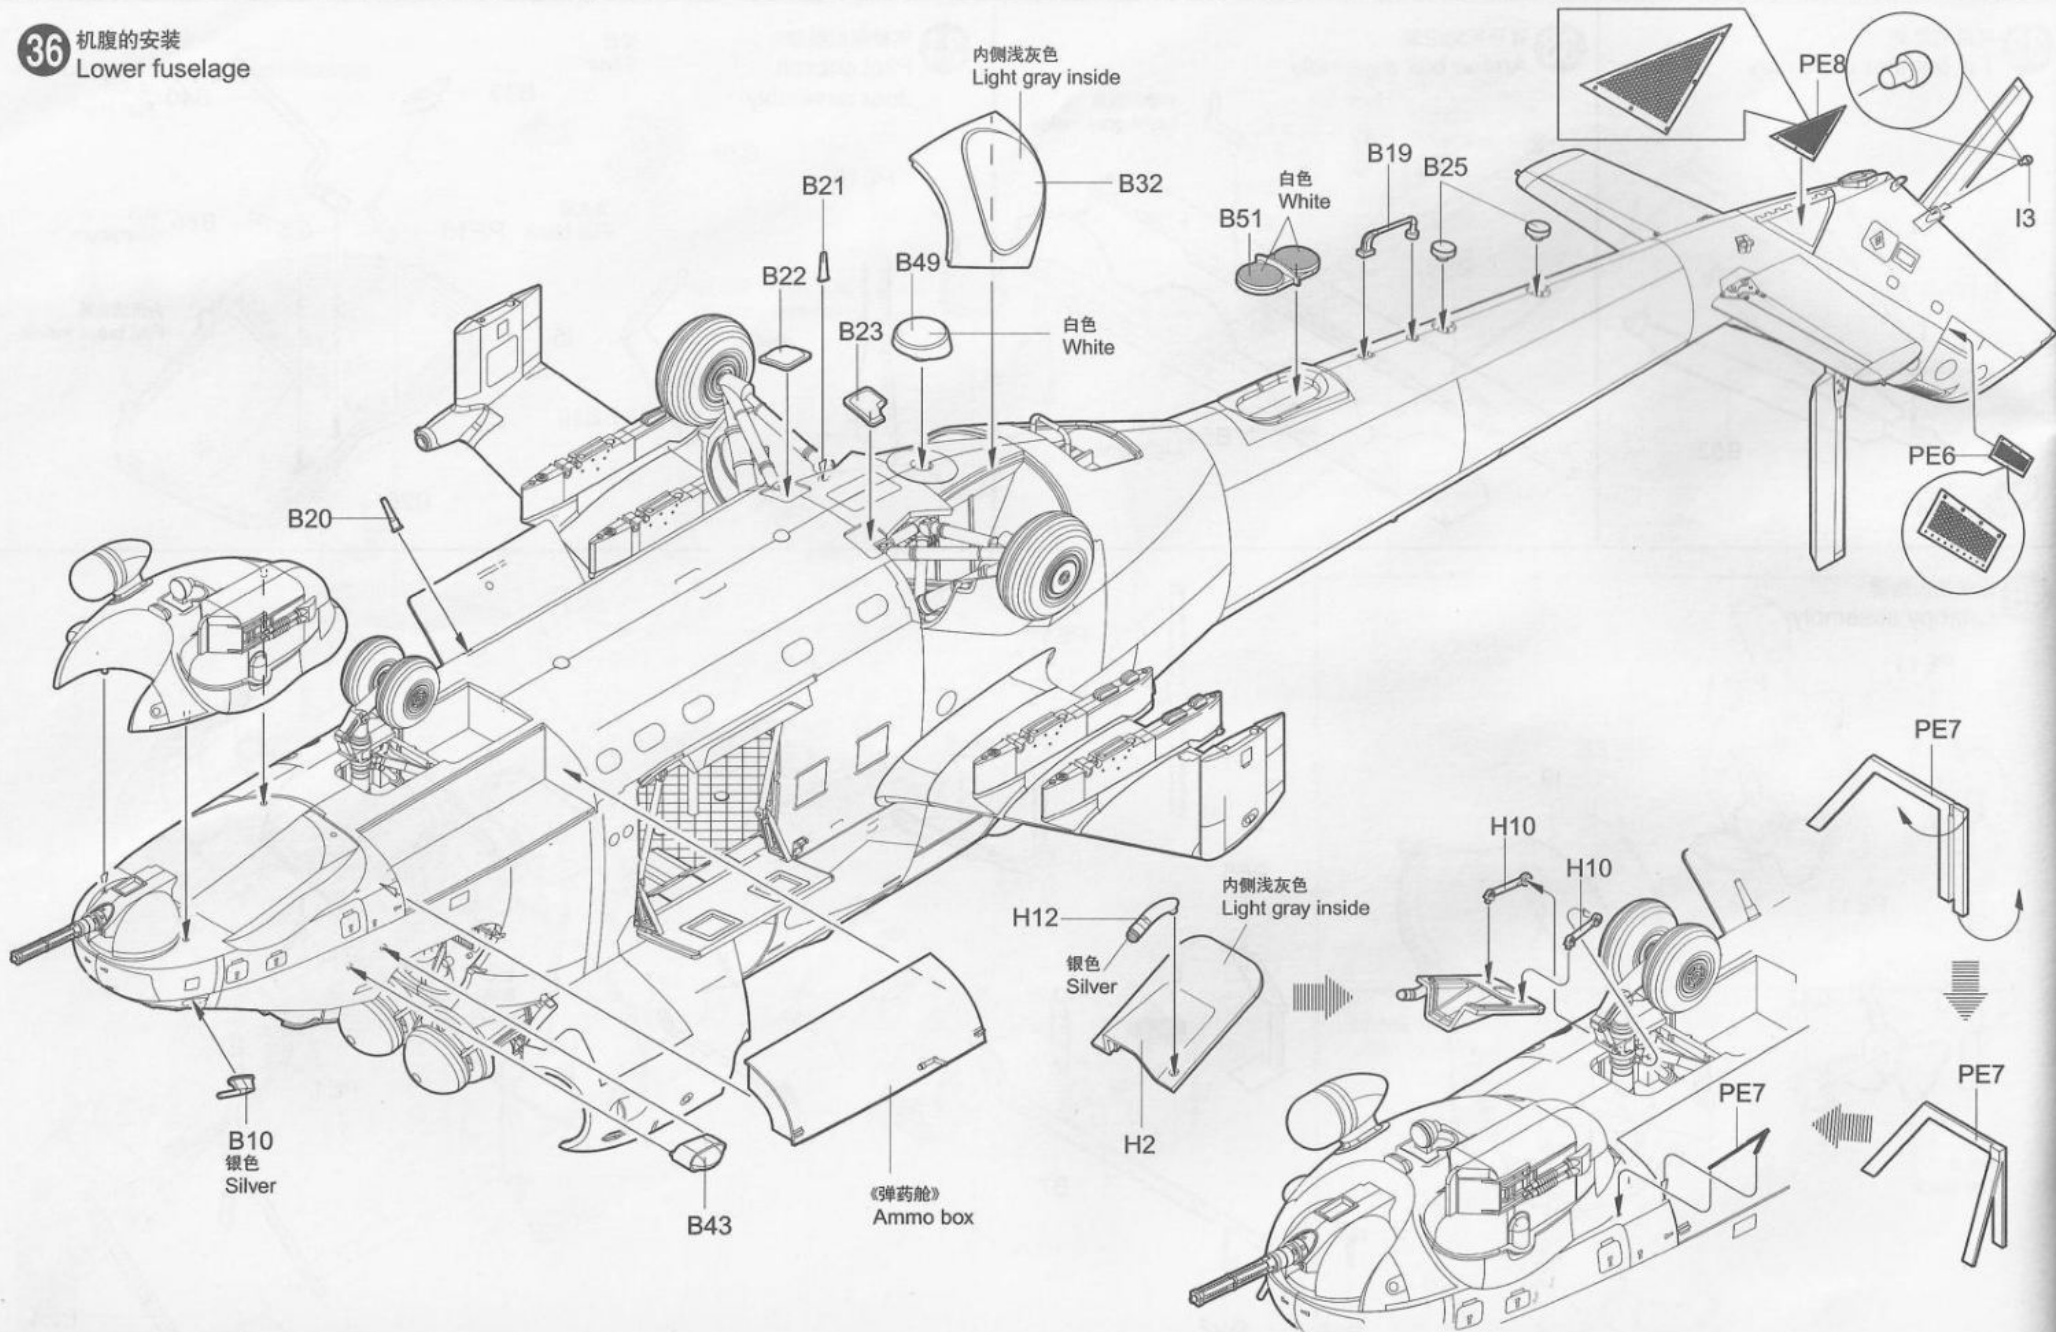 

37 机腹挂架的安装
Belly fuselage assembly

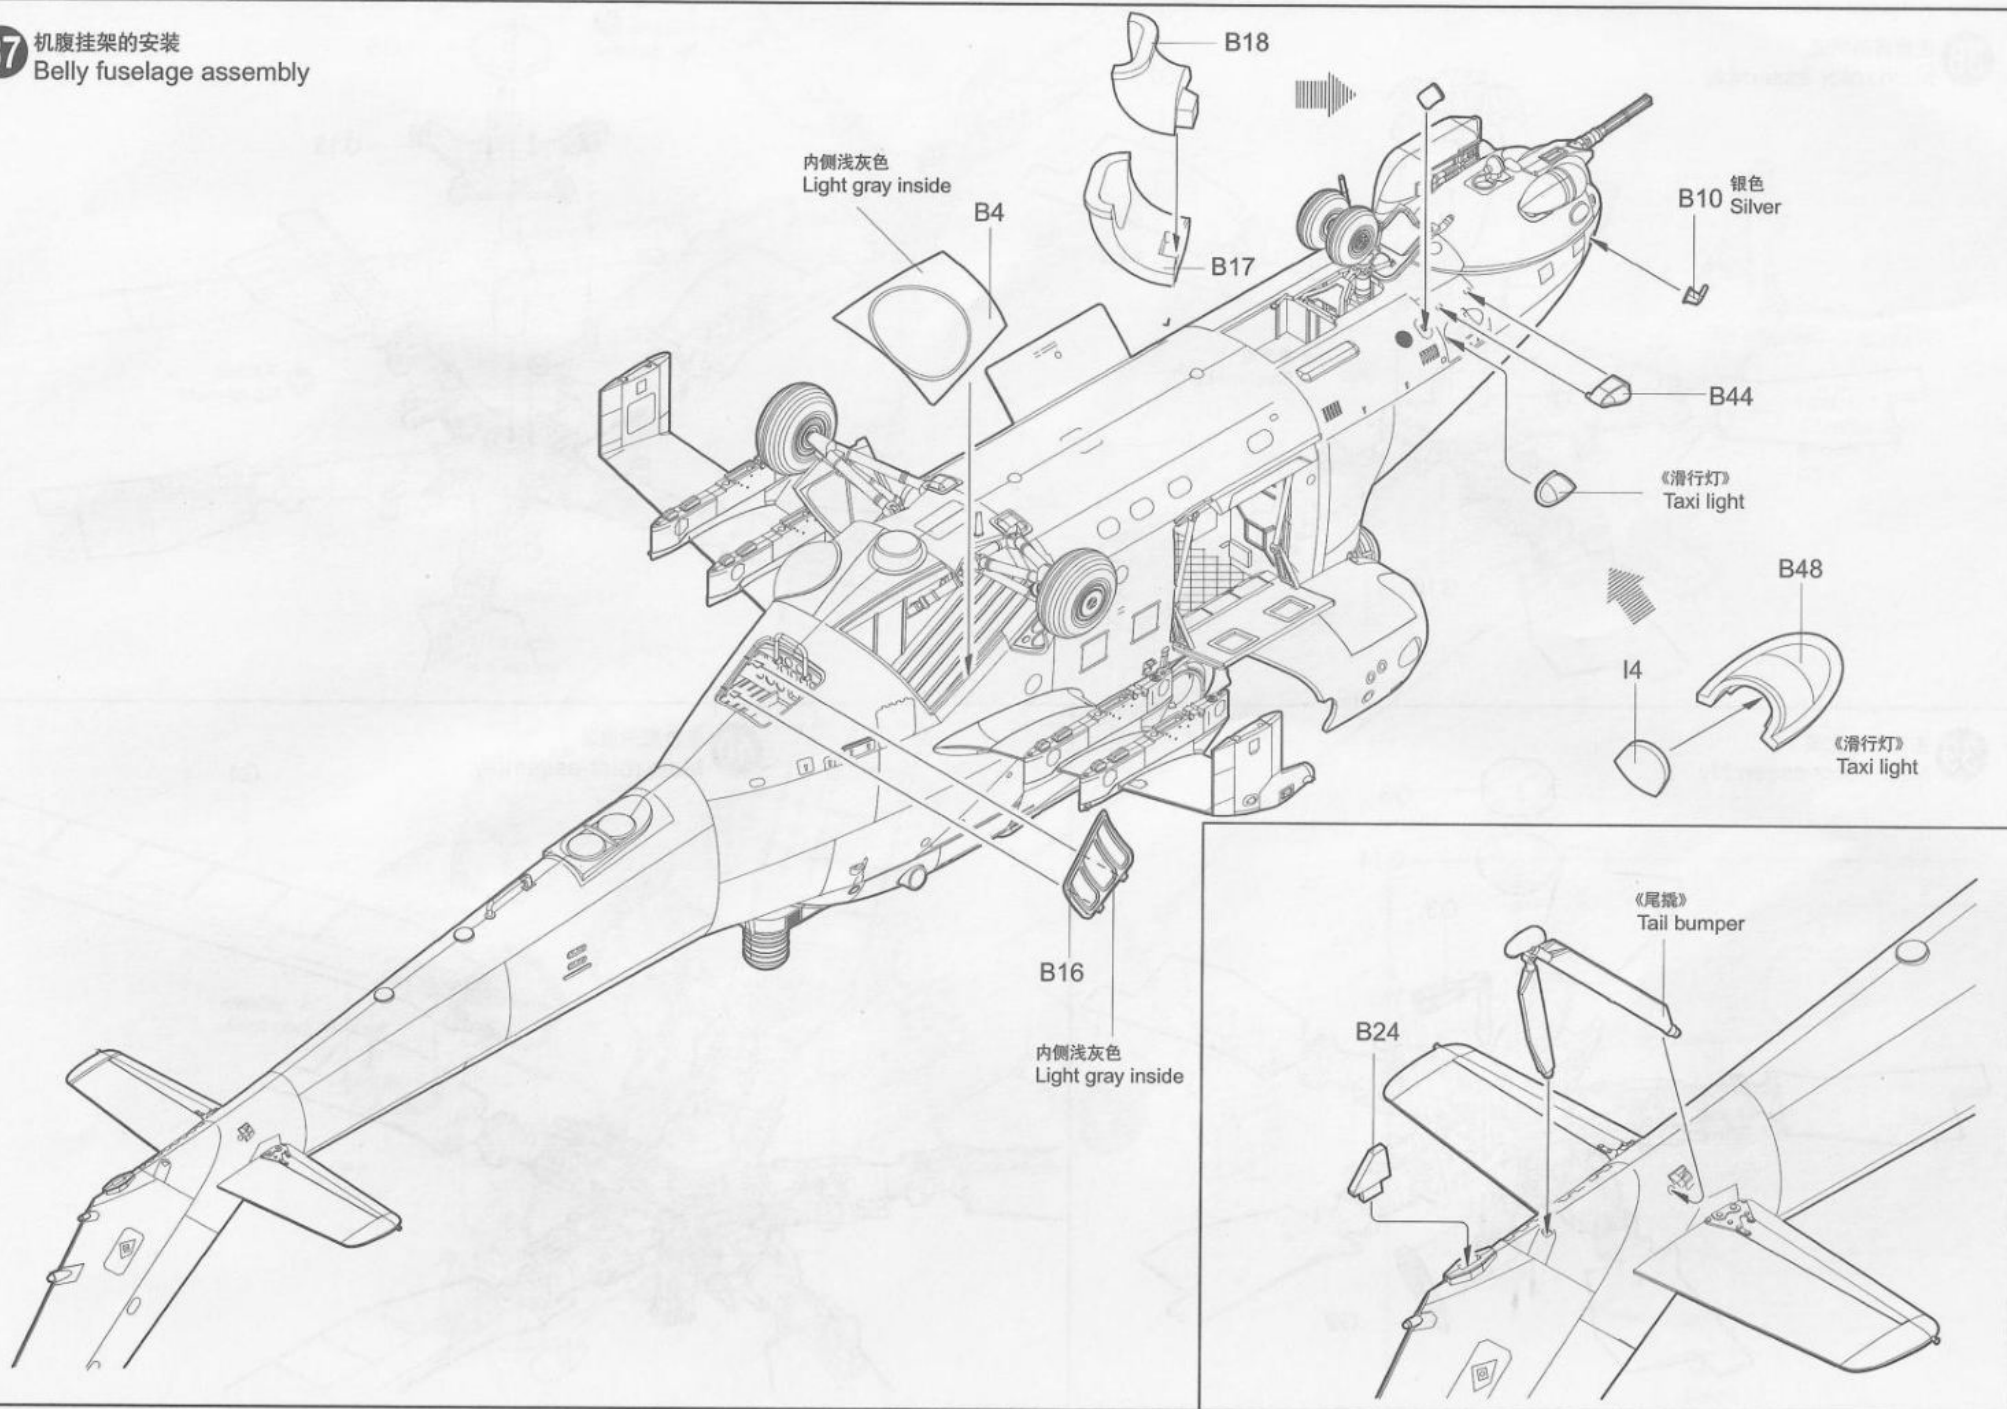 

38 主旋翼的组装
Main rotor assembly

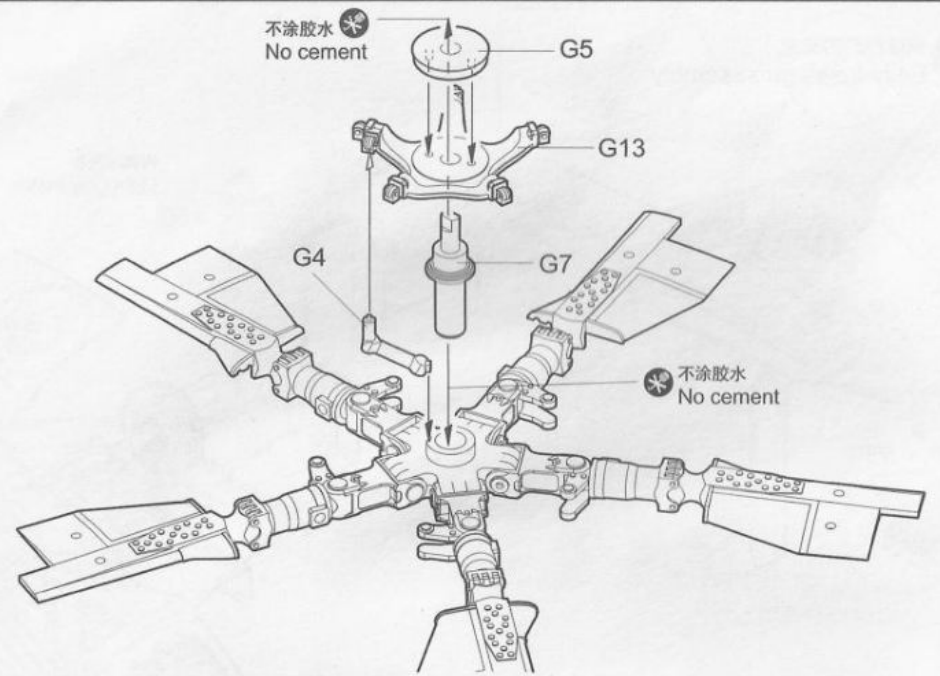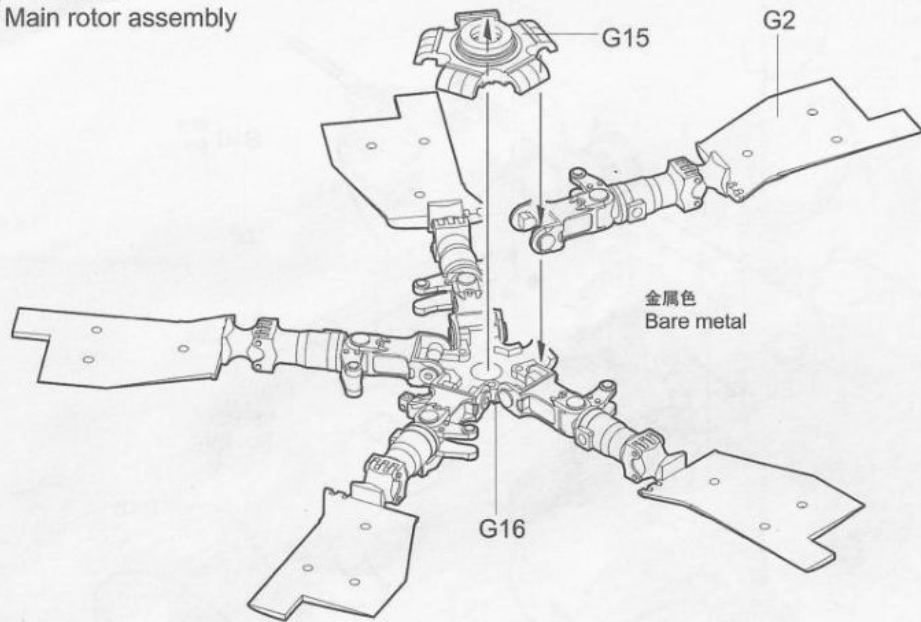  

39 主旋翼的组装
Main rotor assembly

